


Model 124.1  
126.1 starting 1986  
201.1  
140.1


## Front noise encapsulation panel

### Removal


- Unscrew small bolts (arrows) and remove front noise encapsulation panel.

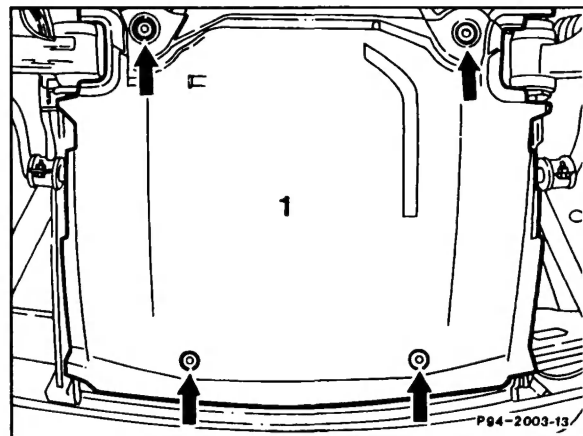

Models 124.1, 140.1

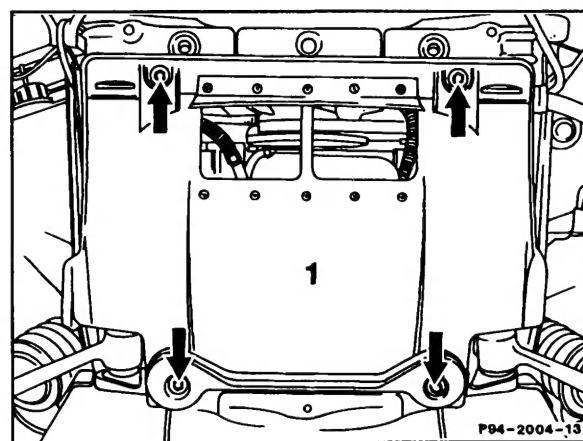


Model 126.1

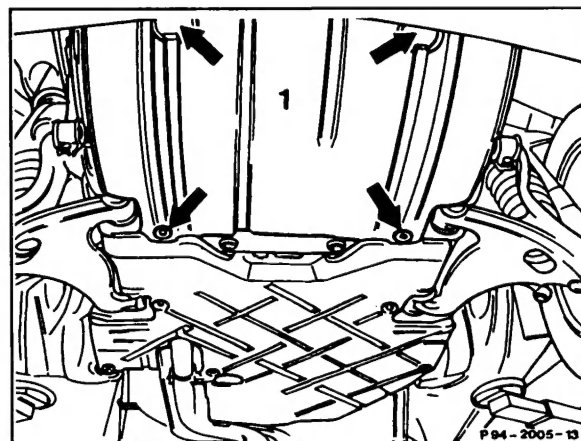


Model 201.1

**Installation**

- On model 124 and 201 engage the slots on the lower noise encapsulation panel (1) with the tabs of the side panels (4).

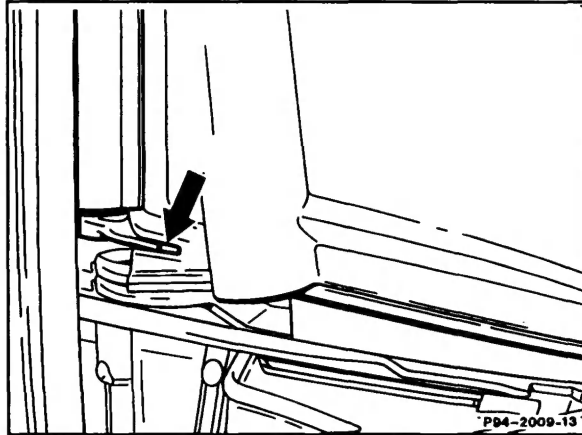


Model 124.1

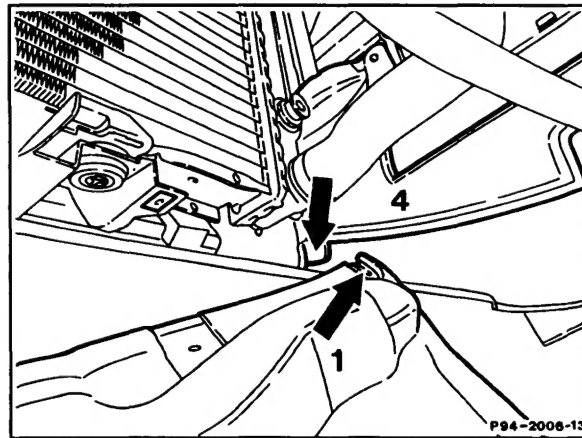


Model 201.1


- Push lower noise encapsulation panel (1) up; edges of side panels (3) must engage over lower panel (1).
- Bolt lower noise encapsulation panel (1) in place.

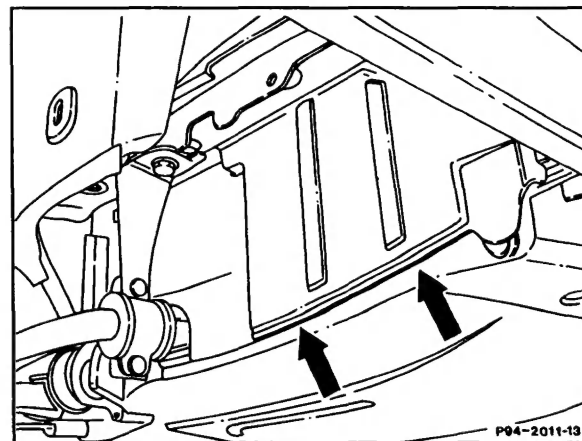

Models 124.1, 140.1

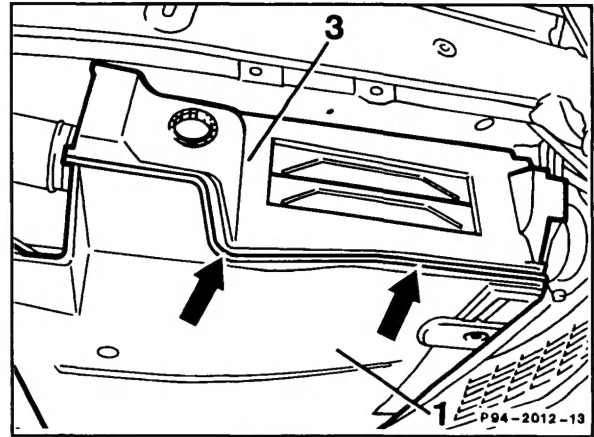

Model 126.1

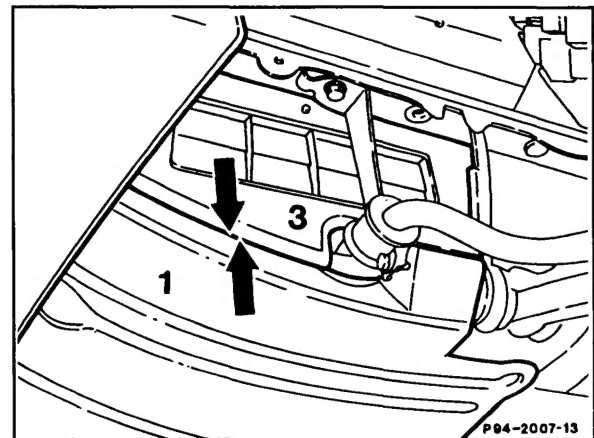


Model 201.1

## Center noise encapsulation panel Model 140.1 only

### Removal/Installation


- Screw out small bolts (arrows) and remove noise encapsulation panel (2).
- Install in reverse order.

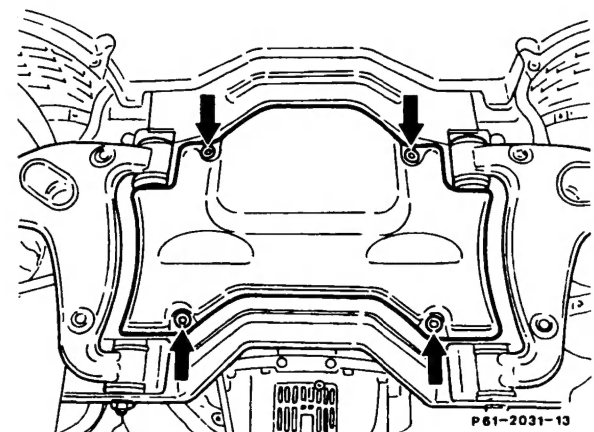

## Rear noise encapsulation panel



### Removal

- Screw out small bolts (arrows) and remove noise encapsulation panel (2) toward rear.

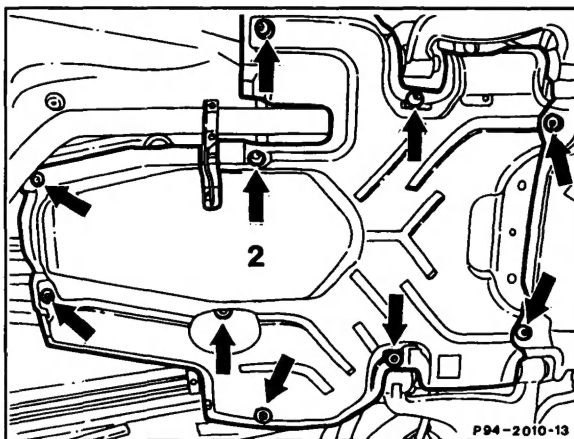

### Installation

- Insert rear noise encapsulation panel (2) between front axle cross member and front noise encapsulation panel (1).
- Bolt lower noise encapsulation panel (1) in place.

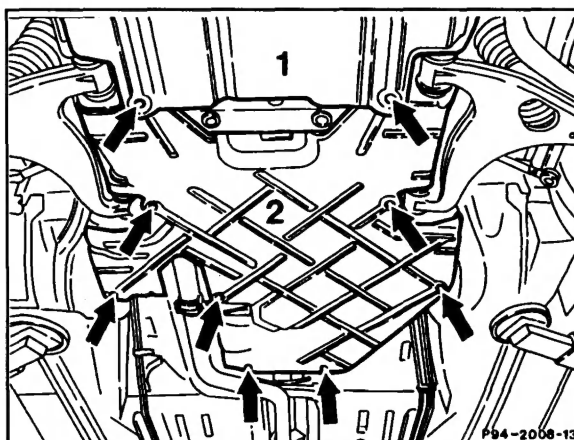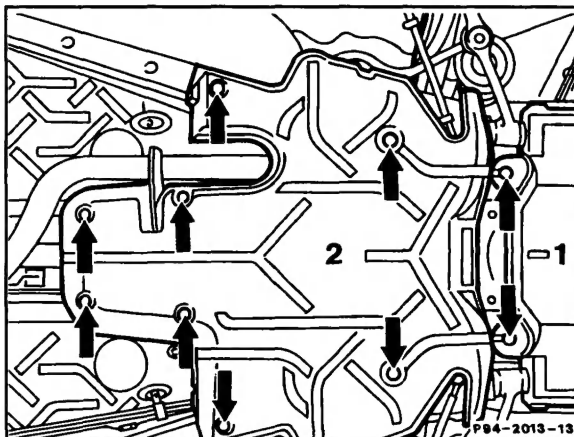

Model 201.1